

# OPERATING INSTRUCTIONS

## MODEL-250 UNI-FUZZ

1. Connect Guitar cable to input jack of **UNI-FUZZ**
2. Connect Amplifier cable to output jack of **UNI-FUZZ**
3. Adjust **EXPANDER** control to obtain desired intensity of fuzz
4. Adjust **BALANCE** control to obtain desired volume
5. Slide switch selects two types of tone

Position 1 Fuzz tone

Position 2 Sustained tone with Fuzz tone added

6. Remote control foot switch cuts **UNI-FUZZ**, either in or out of the circuit

