


FENDER "PRO-AMP" LAYOUT MODEL 5E5

NOTICE

VOLTAGES READ TO GROUND
WITH ELECTRONIC VOLTMEETER.
VALUES SHOWN + OR - 20%

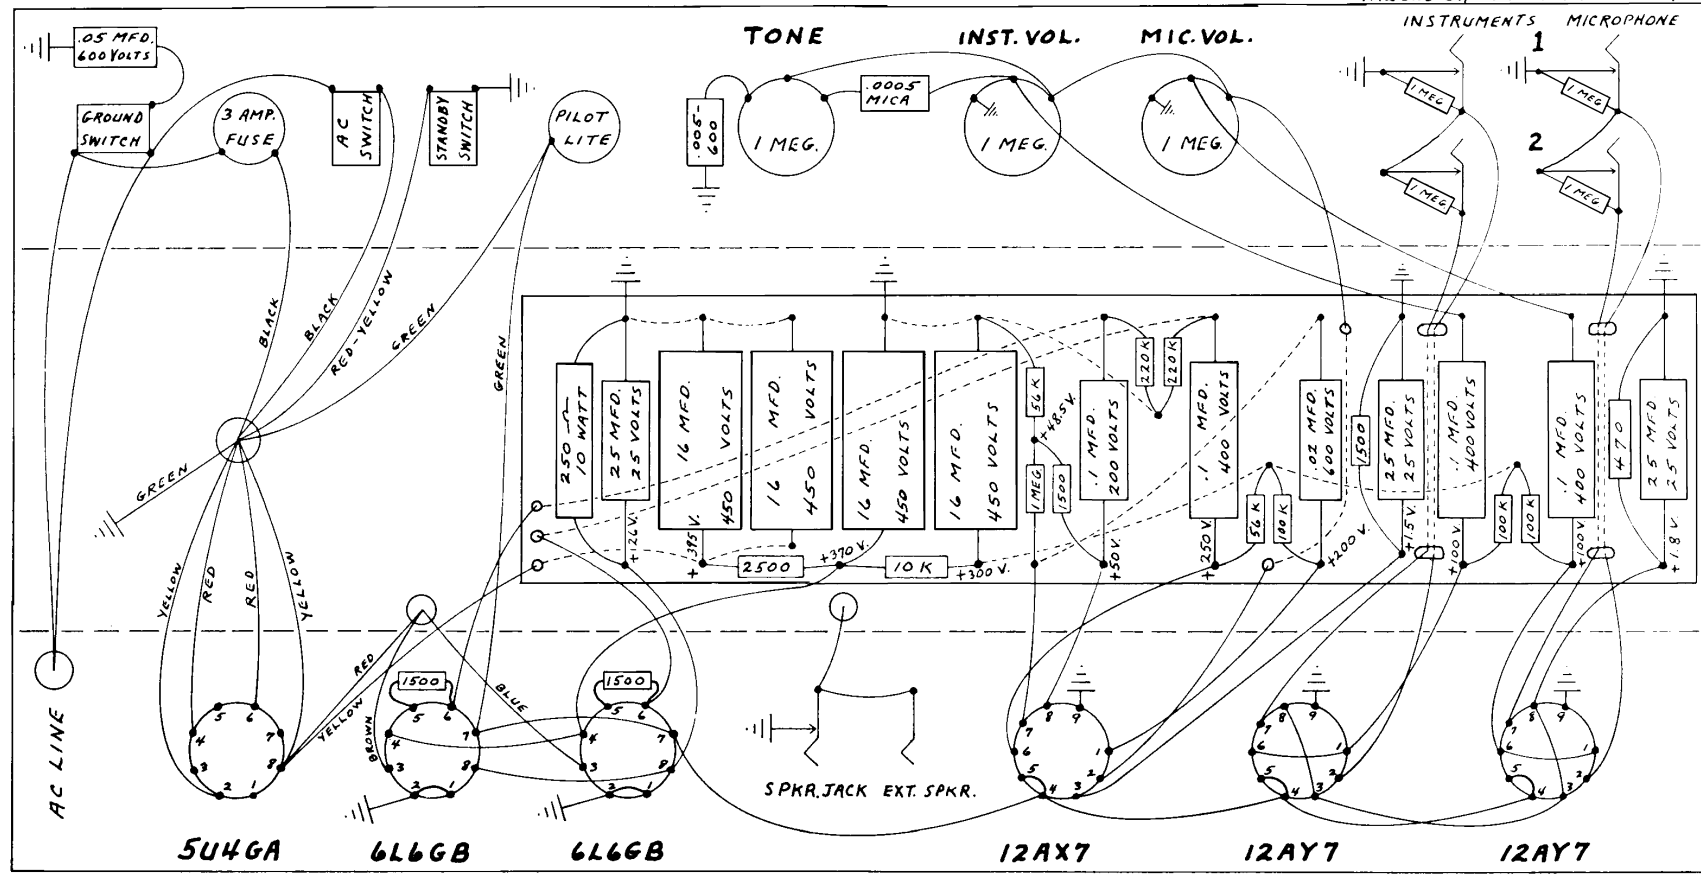

FENDER "PRO-AMP" SCHEMATIC MODEL 5E5

NOTICE
VOLTAGES READ TO GROUND
WITH ELECTRONIC VOLTMETER.
VALUES SHOWN \pm OR $- 20\%$

