


7189A
7185A

12 DW7 / 7247

12 AU7

7025

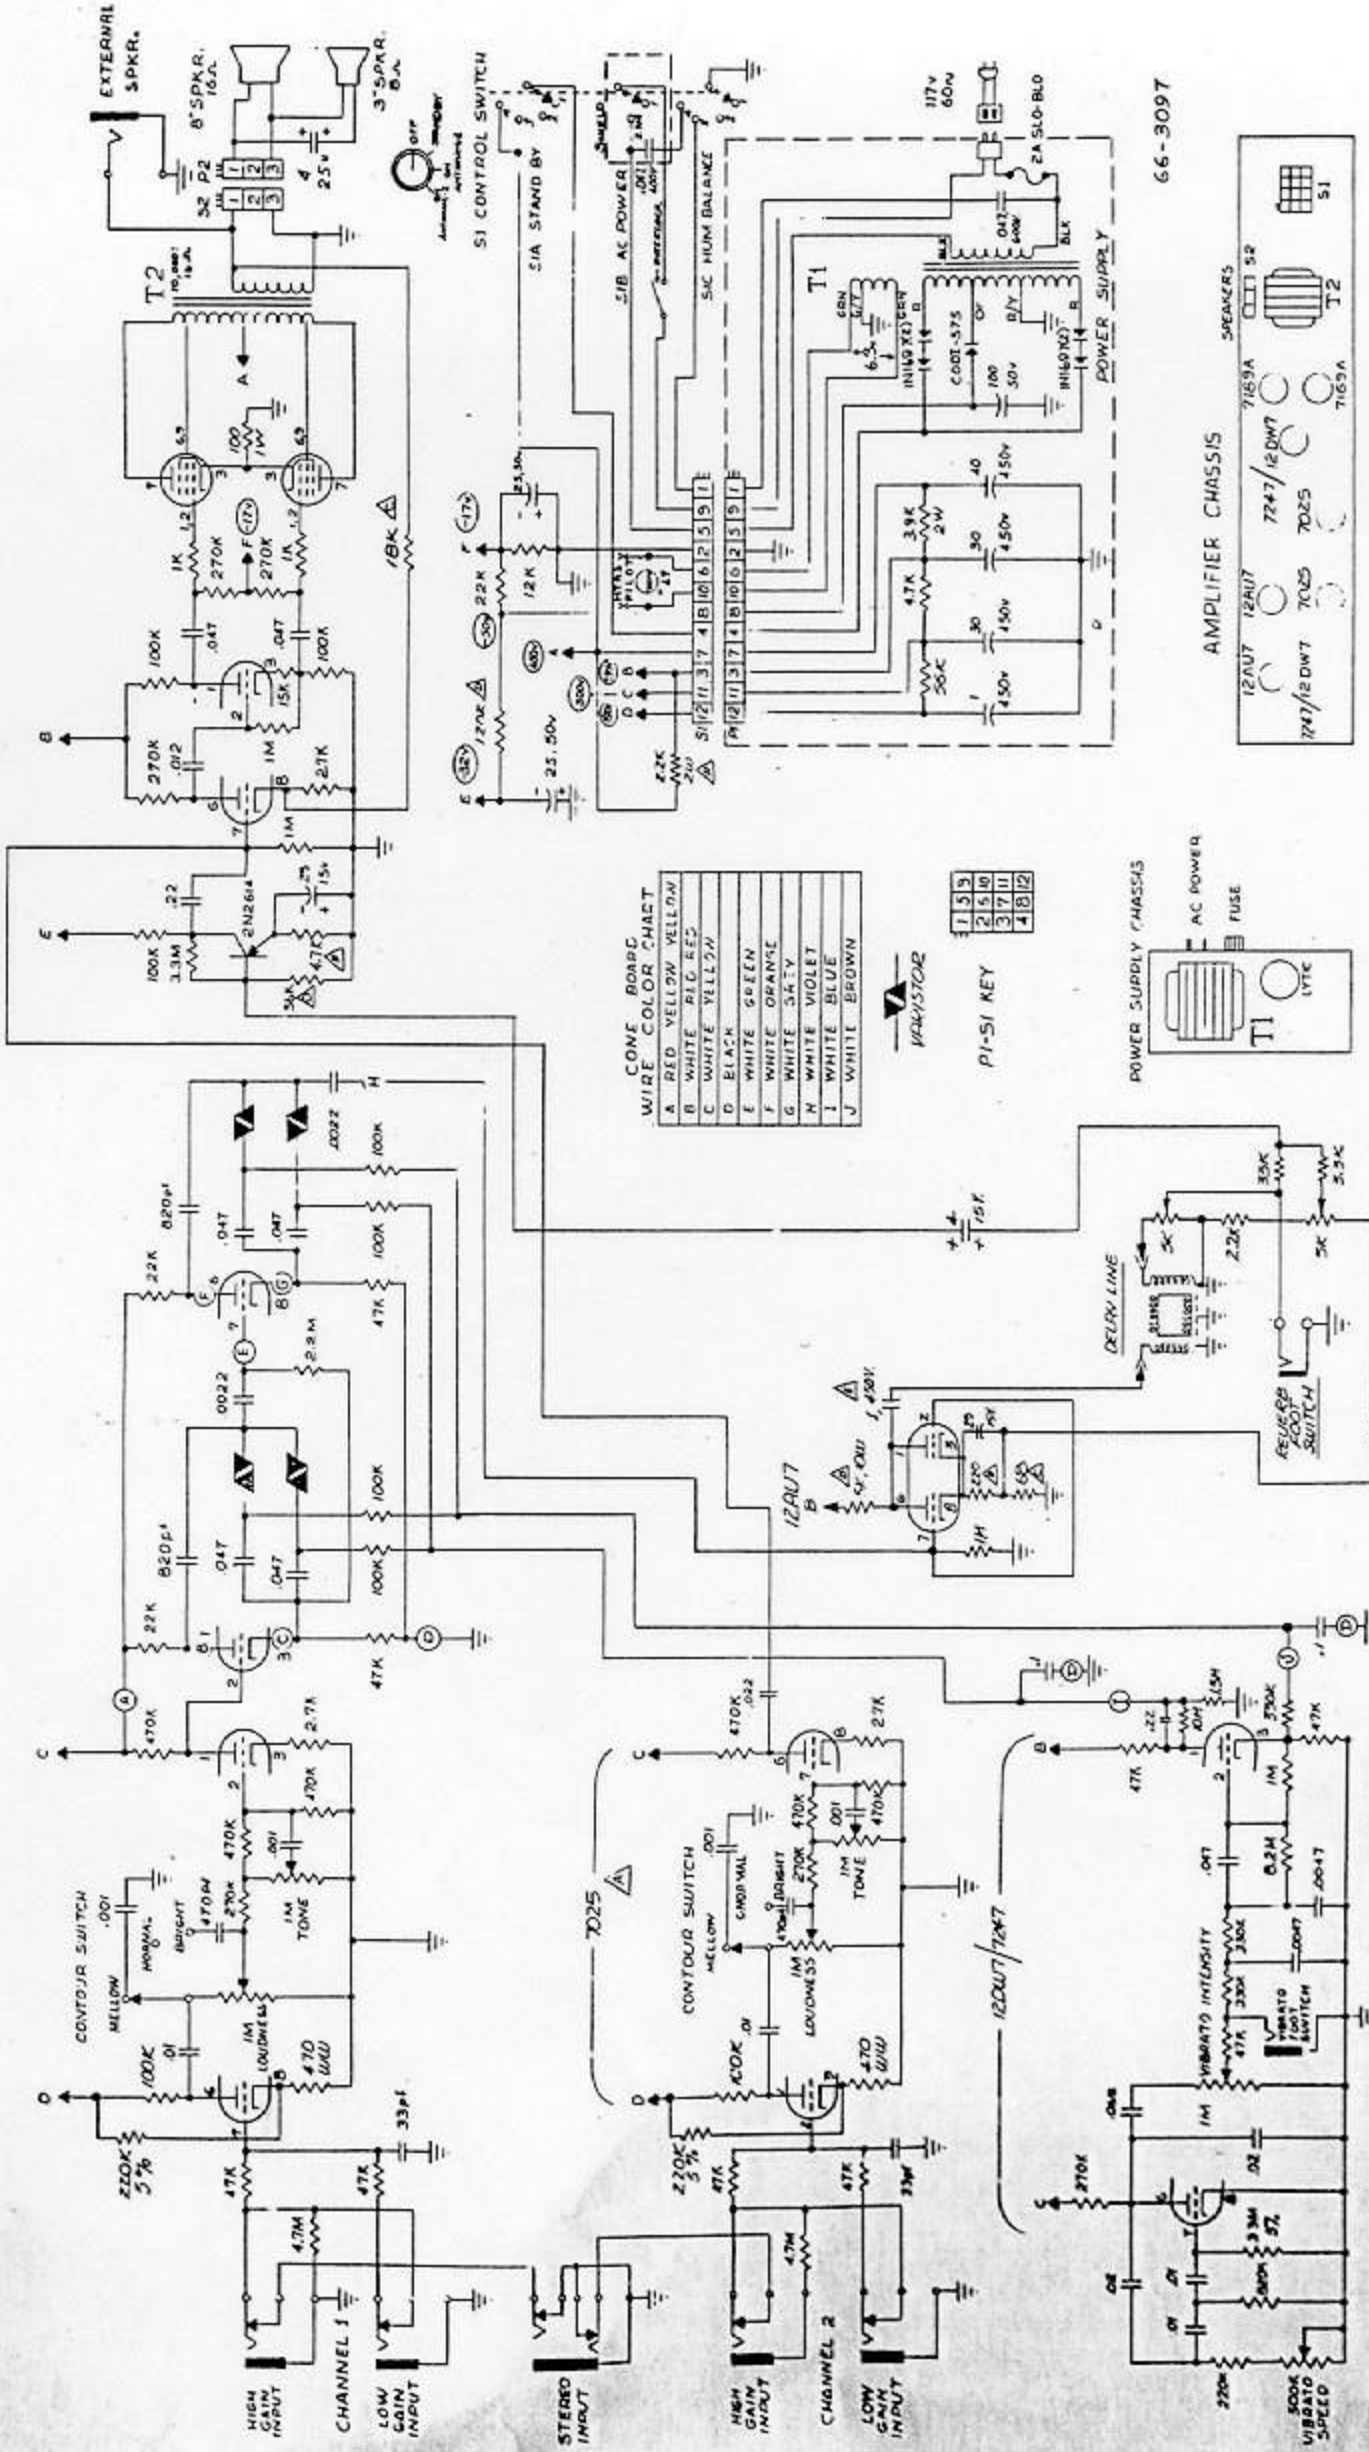

WIRE COLOR CHART

A	RED
B	WHITE
C	BLACK
D	YELLOW
E	GREEN
F	ORANGE
G	WHITE
H	VIOLET
I	BLUE
J	BROWN

PI-SI KEY


1	3
2	5
3	7
4	9

AMPLIFIER CHASSIS




66-3097

POWER SUPPLY CHASSIS

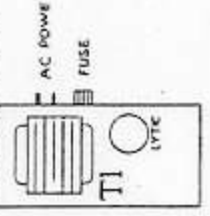


SPEAKERS

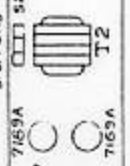

EXTERNAL SPKR.



 
SI CONTROL SWITCH




21A STAND BY



 21B AC POWER



SAC HUM BALANCE

 


1641302



EXURY LINE



 REVERSE SWITCH



500K VIBRATO SPEED

